



- MxThinClient
- 2 adhesive tape strips, white

Required accessories
(not included in delivery):

- Ethernet cable RJ45
- HDMI cable (Micro HDMI), fully shielded, type A to type D
- If the MxThinClient is installed using screws, only use flat-head screws (max. dia. of screw head 10 mm, max. dia. of thread 5 mm)

IP Video Interface for Display on a Monitor/TV Panel

High-resolution display of cameras and door stations on a monitor or TV panel.


More information:

www.mobotix.com > Products > Accessories > MxThinClient

Mx-A-TCLIENTA
32.931-002_EN_07/2017

MOBOTIX

Connection Example

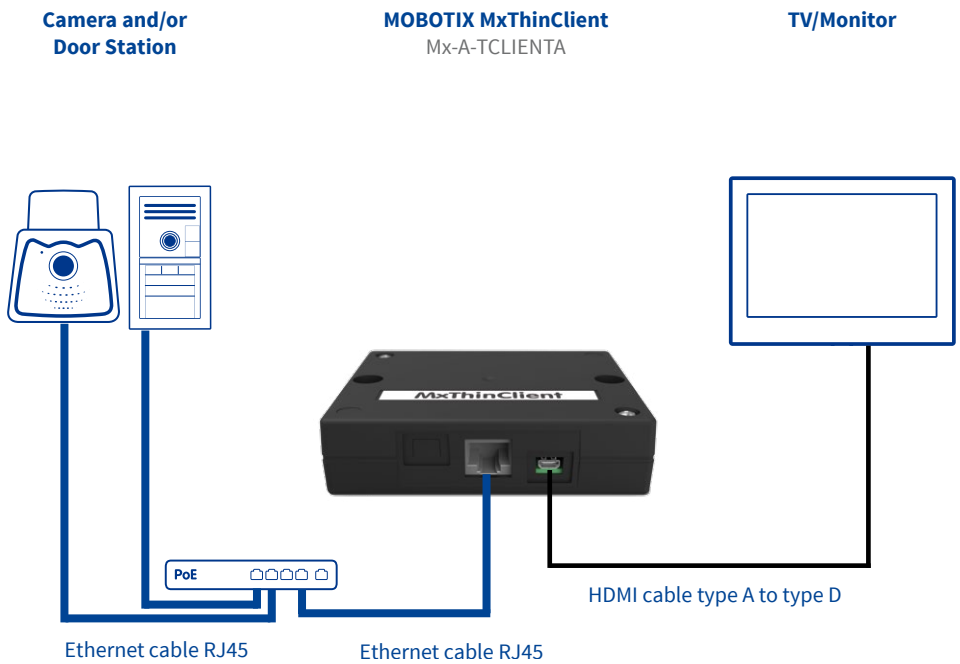

Installation Instructions

1. Fasten the MxThinClient

Place the MxThinClient besides the TV or monitor. You can also use the supplied adhesive tape strips or screws to fasten the box at the desired position (screws are not part of the delivery).

2. Connect the cables

1. Connect MxThinClient to the TV/monitor using an HDMI cable.
2. Switch to the proper HDMI channel on the TV/monitor.
3. Connect MxThinClient to a free PoE port of a switch using an RJ45 Ethernet patch cable.

Note: If the steps above are not followed in the order listed, some display devices may not show any image at all.

Note: Make sure that the devices have a native HDMI connector; adapters cannot be used.



Features of the MxThinClient

Using the MxThinClient, you can show live streams of MOBOTIX P3 or Mx6 cameras or static images (JPEG or PNG) on a TV or monitor with HDMI input. The following two main features are available:

• Sequencer Feature:

By default, the integrated sequencer automatically cycles through all defined image sources (cameras and still images). For this purpose, you can set a global time to show an image source and also individual times to show specific image sources.

• Automatic Pop-Up Feature (via MxMessageSystem)

On top of the automatic sequencer, the device can also show an image source as a reaction to specific events. For example, you can use this mechanism to show the live video stream from a door station after someone rang the doorbell. To be able to use this feature, MxMessageSystem must be configured both on the camera and on the MxThinClient. The image source will pop up after the device has received an

MxMessageSystem notification with the specified message name.

Note: If the MxThinClient is attached to a TV or monitor with several HDMI inputs and the device receives a message to switch to a specific image source, the device cannot automatically switch to the proper HDMI input.

To configure the image sources and all other relevant settings, please use a web browser and follow the instructions on the following page.

MOBOTIX



1. Open the MxThinClient User Interface in a Browser


Enter the IP address of the MxThinClient:

```
http://<MxThinClient IP address>
```

By default, the MxThinClient has been set to run as a DHCP client with an additional static IP address in the 10.x range (network mask 255.0.0.0) printed on the housing of the device. If you are running the MxThinClient in a network with a DHCP server (e.g., DSL router), you can look up the IP address in the list of devices of the DHCP server. When using a DSL router with integrated DHCP/DNS server, you can also use the host name of the device MxThinClient<10x factory IP address> in the browser address bar.

Example:

```
http://MxThinClient10-7-35-193
```

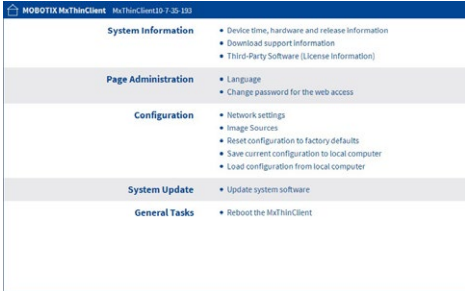

2. Set the Language and Change the Password

The factory default language is English. If required, click on **Page Administration > Language** and select a different language.

For security reasons, you should change the factory default password. Click on **Page Administration > Change password for the web access** and set a new password.

3. Set Up the Network

If you intend to use the pop-up feature to show image sources via MxMessageSystem described above, you need to adjust the settings in the following dialogs of the **Configuration** section:

- **Network settings: NTP**
When using messages of the MxMessageSystem,

the time of the MxThinClient must run in sync with the cameras and door stations that are sending the messages. In the **NTP** section, enable the time synchronization and enter the same time server (IP address or name) as on the cameras and door stations. Note that you can also use a camera or a door station as a time server.

- **Network settings: MxMessageSystem – Distribution of Message over the Network**

Activate this section if you want to receive messages from a camera or door station via the MxMessageSystem.

Important: Make sure that these entries are identical to the entries in the MxMessageSystem configuration of all cameras or door stations that are sending messages.

4. Configure the Image Sources (Cameras/Still Images)

Open the **Configuration > Image Sources** dialog to define all image sources (live video streams and/or images) you want to display as well as the corresponding display duration..

Notes:

- To display still images, set the **Codec** dropdown to **Image** and then specify the ftp[s] or http[s] address to download the image to show. These images are currently not stored in the MxThinClient, but will be loaded every time they are displayed.
- By default, all defined image sources are displayed using the global **sequencer display duration**. To define an individual display duration for an image source, activate the **Use Individual Display Duration** option.
- If you enter the name of a message in the **Message Name** field, the device will automatically display this image source if it receives a message with this name.

Safety Warnings

- This product must not be used in explosion-hazardous locations.
- The MxThinClient is intended for indoor use only. Make sure to respect the operating temperature range of 0 to +40 °C for the MxThinClient.
- Network security: MOBOTIX products include all of the necessary configuration options for operation in Ethernet networks in compliance with data protection laws. The operator is responsible for the data protection concept across the entire system. The basic settings required to prevent misuse can be configured in the software and are password-protected.

This prevents unauthorized parties from accessing these settings.

- Make sure that you adhere to all relevant laws, regulations and that you fulfill all certification requirements for the intended use.

Technical Specifications

Connections	Ethernet 1.00Base-T (RJ45); HDMI type D (Micro HDMI)
Certifications	EN55032:2012; EN55022:2010; EN55024:2010; EN50121-4:2015; EN61000-6-1:2007; EN61000-6-2:2005; EN61000-6-3:2007 + A1:2011; EN61000-6-4:2007 + A1:2011; AS/NZS CISPR22:2009 + A1:2010; CFR47 FCC part15B
Video Codec	MxPEG/M-JPEG
Formats (codecs) for Still Images	PNG, JPG, up to 10 MB
Camera Software	Release 4.4.x/5.0.x or higher
Power Consumption	2 W
Power Supply	PoE IEEE 802.3af
Protocols	IPv4, HTTP, HTTPS, NTP, FTP, FTPS, HDMI 1.4

Max. Image Size	Full HD
Output Image Sizes	- Image size of image source unaltered (max. Full HD) - VGA (640x480), SVGA (800x600), XGA (1024x768), HD (1280x720), Mega (1280x960), Full-HD (1920x720) - When showing dual images, the x value of the image sizes from above is used
Operating Conditions	Only for indoor applications, 0 to +40 °C
Protection Class	IP20
Dimensions	(height x width x depth): 25 x 100 x 80 mm / 1 x 3.94 x 3.15 in
Materials	Housing: Polycarbonate, black
Weight	Approx. 125 g



MOBOTIX, the MX logo, MxControlCenter, MxEasy, MxPEG and MxActivitySensor are trademarks of MOBOTIX AG registered in the European Union, the U.S.A., and other countries • Information subject to change without notice • MOBOTIX does not assume any liability for technical or editorial errors or omissions contained herein • All rights reserved • © MOBOTIX AG 2017

MOBOTIX AG
Kaiserstrasse
D-67722 Langmeil
Phone: +49 6302 9816-103
Fax: +49 6302 9816-190
sales@mobotix.com
www.mobotix.com



Declaration of Conformity: www.mobotix.com > Support > MxMedia Library > Certificates

