

**Accept call and speak**

Pick up receiver &gt; key 7 &gt; microphone is activated



7

**Open door**

Pick up receiver &gt; key 1



1

**Turn on light**

Pick up receiver &gt; key 3



3

**Video recording in case of suspicion**

Pick up receiver &gt; key 9



9

**Turn doorbell to mute**

Pick up receiver &gt; 3x key \* &gt; key 1 &gt; press key 1 repeatedly until profile 0 is activated &gt; key \* &gt; doorbell is muted



\*

\*

\*

1

1

\*

**Turn doorbell back on:** Activate profile 1**Change volume of receiver**

Line key &gt; key F1 &gt; pick up receiver &gt; arrow keys



F1



+

-

Security-Vision

MOBOTIX

180°

HD Super Panorama – No Blind Spots From Wall To Wall



## Access latest message

Pick up receiver > key \* > key 1 > key 2



## View video recordings

Pick up receiver > 2x key \* > player mode is activated



## Move camera image

Pick up receiver > key 2 (up), key 8 (down), key 6 (right), key 4 (left); key 0 (default view); alternatively, arrow keys can be used



## Zoom camera image

Pick up receiver > key 5 (zoom mode is activated), key 2 (zoom in), key 8 (zoom out), key 0 (default view); alternatively, arrow keys can be used



## Status icons

	Door open		Light on
	Door closed		Microphone mute
	Door locked		Recording on
	Door unlocked		Latest message
	Error/Manipulation		Camera error



## Open door with blue user card

Hold up user card > door is unlocked



## Open door with PIN code

Enter PIN code > press key button > door is unlocked



PIN code



## Open door on power failure (red LED flashes every 4 sec)

Press ESC/ALARM (until sound signal/lighting is on) > opening the door with card and PIN is possible now



keep pressed



## Leave a message (for standard mailbox)

Press envelope key > welcome message plays > keep envelope key pressed and leave message



Welcome message



keep pressed

Message

## Play back messages\*

Hold up user card > keys 0 – 9 blink: 0 – 9 new messages > play back with keys 0 – 9



Messages

## Record new welcome message for mailbox\*

Press OK/MENU and hold the key > hold up user card > press bell key > press bell key again > keep envelope key pressed and leave message > let go of envelope key > welcome message is activated



keep pressed



keep pressed

Status LEDs ● ●



● on	Normal status
● on	Device error
✶ flashes every 4 sec	Emergency operation



## Open door (also on power failure)

Keep door opener key pressed for **3 seconds**



## Confirm message display (green LED blinks every 2 sec)

Press door opener key briefly



## Switch doorbell on/off

Press doorbell key (left) briefly > doorbell is switched on or off



## Change volume

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal)



**Lower:** Press doorbell key (left) briefly

**Higher:** Press door opener key (right) briefly

## Change ring tone

Keep doorbell key (left) pressed for **2 seconds** (until double sound signal) > press both keys at the same time briefly > press door opener key (right) repeatedly (until desired ring tone is found)



● Status LEDs ●



● on	Door closed & locked	Door
☀ flashes every 2 sec	Door closed & unlocked	
● on	No contact	Establishing Contact
● blinks every 2 sec	New message	
○ briefly off after 1 sec	Missed the ringing by less than 5 min	
○ briefly off after 2 sec	Missed the ringing by more than 5 min	Error
● on	Device error	
☀ flashes every 4 sec	Emergency operation	
☀ flashes every 3 sec	Battery is empty	